
# **CELLPHONESANDBOX**

## Manual 09 - Rear Camera

Written By: James Linder

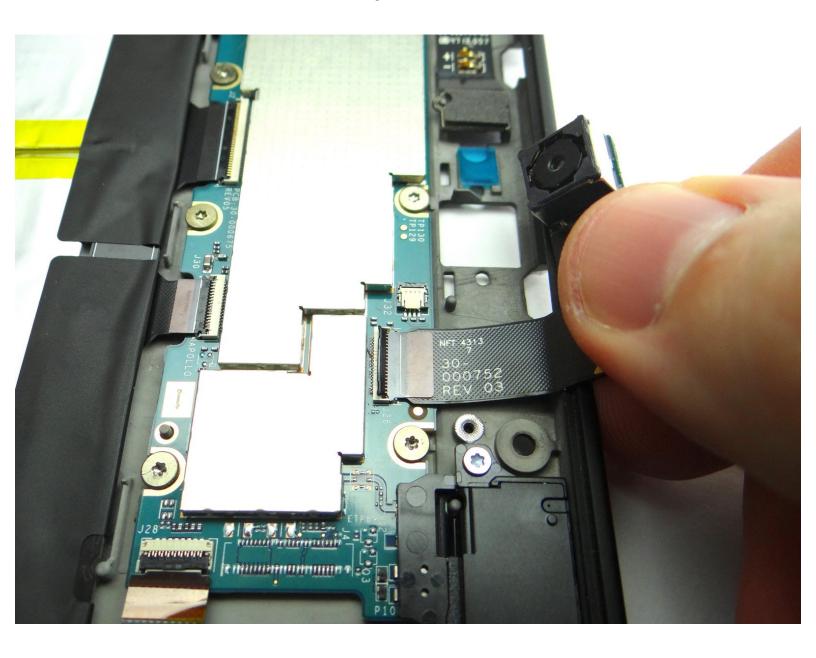


## Step 1 — Removal 1 - Display Assembly








- Power down the device.
- (i) You'll be removing the trim (red square) in the next few steps:
- Apply low level heat (100° Celcius) to the corner of the trim.

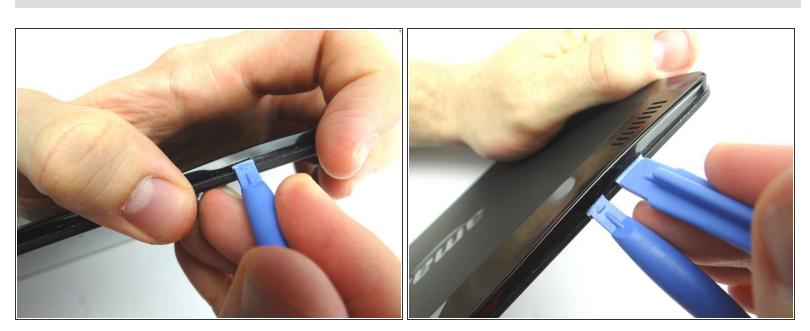

- To begin removing the trim: insert blue pry tool face up between the rear camera and the corner.
- Insert a wide blue pry tool (just right of the first pry tool) and work towards the corner near the volume buttons.



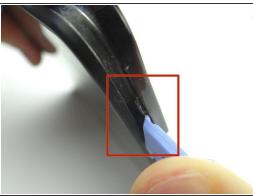



- Pictures 1 & 2: Use a blue pry tool (face up) to pry up the bottom of the trim near the volume rocker. Gently pry up to release the tab (red square).
- Picture 3: Using your fingers, gently pry up the corner of the rear trim.







- Picture 1: Use the wide blue pry tool to work your way towards the camera.
- (i) Picture 2: Apply heat as needed.
- Picture 3: Use the flat end of the spudger to cut through adhesive.





- Apply low level heat (100° Celcius) from the center to the power button.
- Work your way towards the corner.

## Step 6





- Gently lift the trim using your fingers to expose the remaining adhesive.
- Use the flat end of the spudger to cut through it.

This document was generated on 2021-12-23 11:03:22 PM (MST).








- Picture 1 & 2: Finish removing the rear trim with your fingers and place in ZONE I.
- Picture 3: Remove four pink 3.5 mm T5 Torx screws. Place in SLOT 1.








- Pictures 1 & 2: Using your thumbs, apply pressure to the rear case in the corner near the power button to begin separating the display assembly from the rear case.
- Picture 3: Insert a blue pry tool along the top edge between the display assembly and rear case.

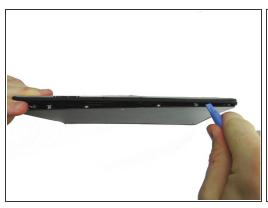







- Picture 1: Hold the corner open with your finger while using the blue pry tool to release the clips along the top of the display assembly.
- Picture 2: Open the screen like a book until all clips are released.
- Picture 3: Lay the rear case on the table with the display assembly open at a 90° angle, as shown.
- In the next couple step you'll release the display cables (red square):

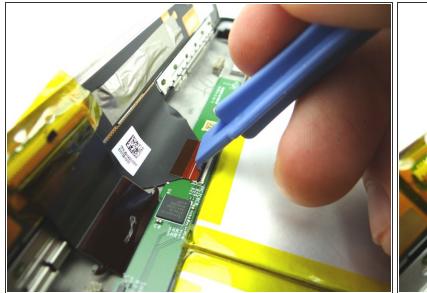



- Use the wide blue pry tool to move the ZIF connector black bar into open position as shown.
- Gently guide the display cable out of the ZIF connector.

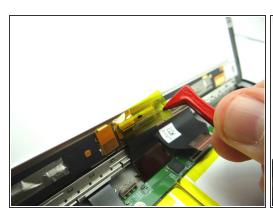

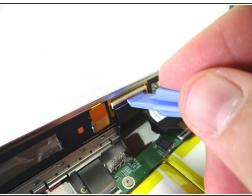



- Picture 1: Peel up yellow Kapton tape with plastic tweezers. Adhere the tape to the wall of COMPARTMENT A.
- (i) You'll need a piece of Kapton tape for reassembly to help hold this display cable in place.
- Picture 2: Use the wide blue pry tool to open the brown bar of the ZIF connector.
- Picture 3: Gently guide the cable out of the ZIF connector.


## Step 12




 Separate the Display Assembly from the Rear Case. Place them in the sandbox.

## Step 13 — Removal 2 - Disconnect Battery (before going on)



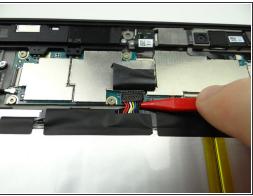

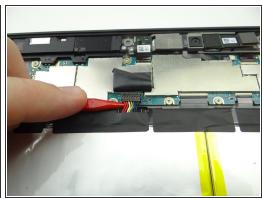


- Picture 1: Peel tape back to expose battery connector.
- (i) Leave tape connected to the logic board as shown.
- Mork slowly and carefully as you pry up the battery connector:
- Picture 2: Use the pointed end of the spudger to pry up right side of battery connector slightly.
- Picture 3: Lift the battery connector straight up from the left side.


## Step 14 — Removal 3.4 - Cameras and Microphones Bracket




- Remove two 2.7mm T5 Torx screws and place in SLOT 2.
- In the next few steps, you'll disconnect: the front-facing camera cable, microphone cable and rear camera cable.

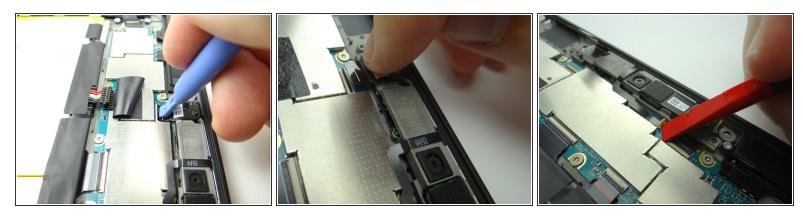

- Picture 1: Use the blue pry tool to open front-facing camera ZIF connector.
- Picture 2: Pull cable free with your fingers.
- Picture 3: Use the corner of the black spudger to open the small white microphone ZIF connector.

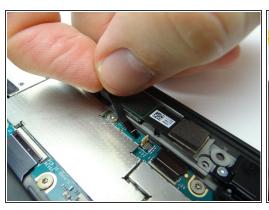


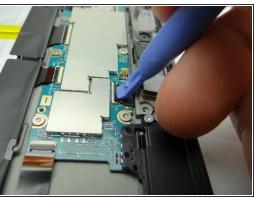




- Picture 1: Pull microphone cable free with your fingers.
- Picture 2: Use the blue pry tool to open rear camera ZIF connector.
- Picture 3: Swivel rear camera up from the socket.

♠ Don't try to remove rear camera.

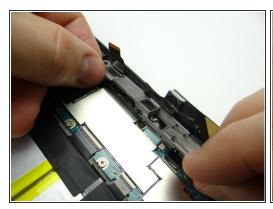


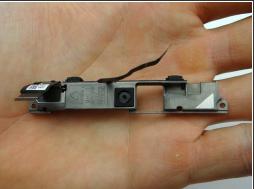




- Picture 1: Pivot bracket to a 45° angle, pull microphones away from their sockets on the rear case, then lift bracket away from Kindle.
- Picture 2: Place the bracket in sandbox.
- Picture 3: The rear camera stabilizer bracket may be loose. If so, place it in COMPARTMENT D.

## Step 18 — Removal 4.1 - Rear Camera

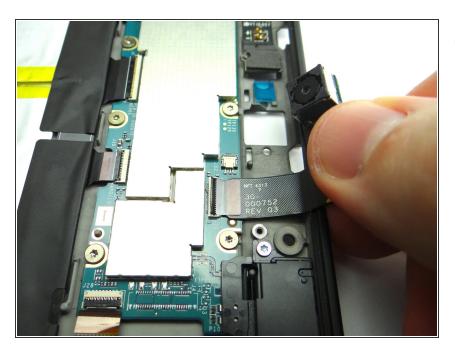


 Pull rear camera free from open ZIF connector. Place in COMPARTMENT E.

## Step 19 — Replacement 4.1 - Rear Camera

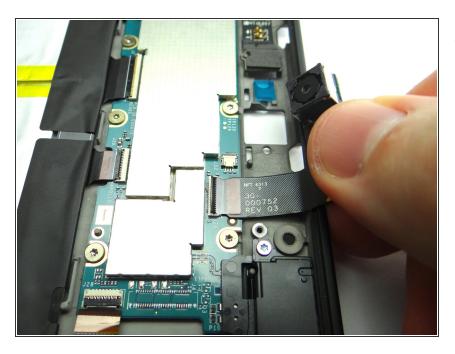



 From COMPARTMENT E, push rear camera cable into open ZIF connector.


## Step 20 — Replacement 3.4 - Cameras and Microphones Bracket

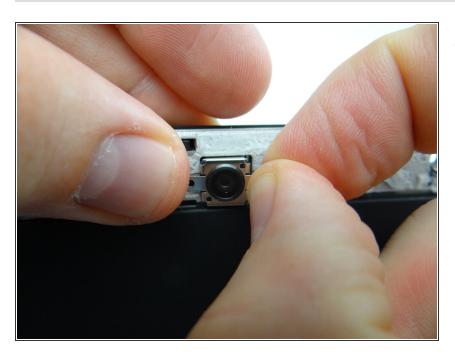


 Replace rear camera stabilizer bracket from COMPARTMENT D.

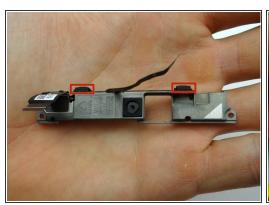

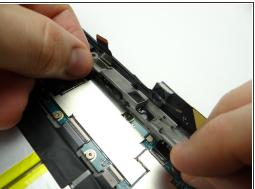

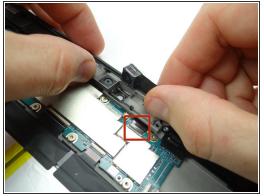


- Replace the microphones and cameras bracket:
- Picture 1 & 2: Carefully align the microphones marked in Picture 1 with the openings on the rear case.
- Picture 3: Make sure the rear camera cable is fully pushed into ZIF connector (red square) while continuing to position bracket into place.

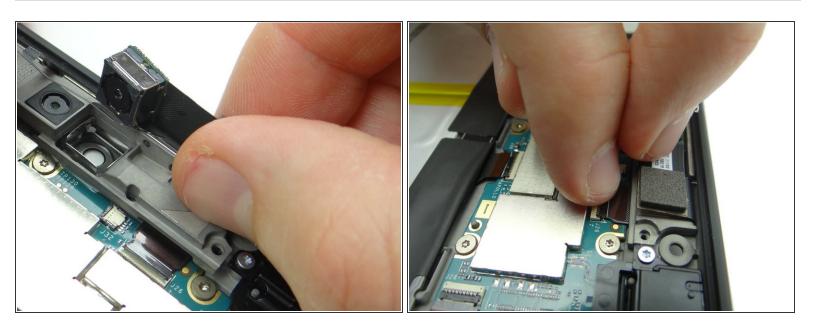


- Push rear camera into its socket on the bracket.
- Close rear camera cable ZIF connector.




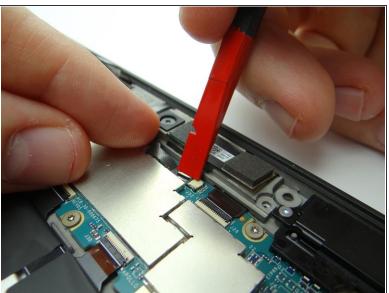

- Insert the microphone cable into the ZIF connector.
- Hold the cable in place with your pointer finger while closing the ZIF connector using the flat end of the spudger.

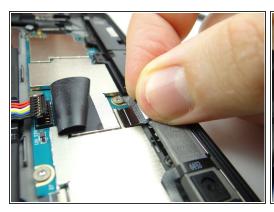





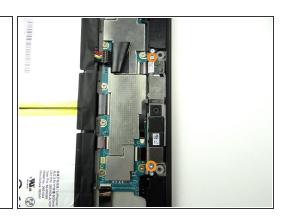

- Picture 1: Insert the front-facing camera cable into the ZIF connector.
- Picture 2: Close the front-facing ZIF connector with your finger.
- Picture 3: Replace two 2.7mm T5 Torx screws from SLOT 2.

## Step 25 — Replacement 2 - Connect Battery

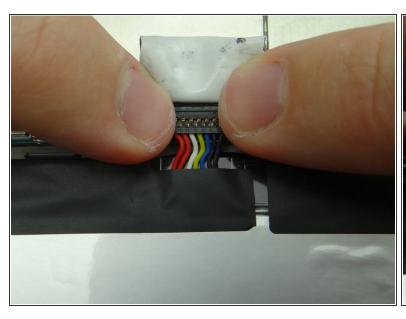

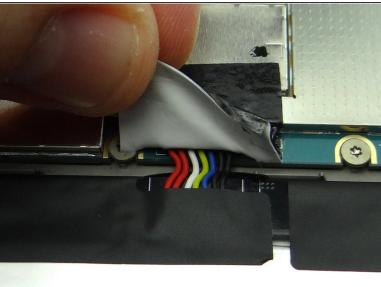

- Push battery connector straight down into its socket on the logic board.
- Fold down tape to cover the battery connector.


## **Step 26** — Replacement 1 - Display Assembly



 Bring the display assembly to the rear case to attach the two display cables.



- Picture 1: Insert the rectangular display cable into the ZIF connector.
- Picture 2: Close the ZIF connector with your finger.
- Picture 3: Cover ZIF connector with Kapton tape from COMPARTMENT A.

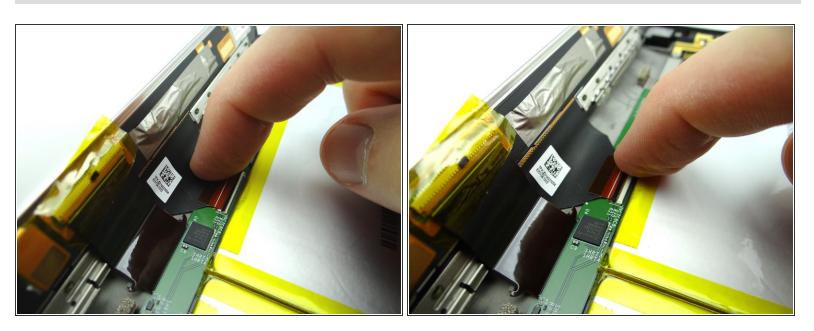

- Guide the triangular display cable into the ZIF connector using your finger.
- Close the ZIF connector.



 Align the clips (red squares) along the bottom of the display assembly with their slots on the rear case.







- Pictures 1 & 2: Press the top of the display assembly firmly into the rear case to secure the clips along the top edge.
- Picture 3: Press firmly on the display assembly to ensure all clips are seated correctly.







- Picture 1: Replace four pink 3.5 mm T5 Torx screws from SLOT 1.
- Picture 2: Replace the rear trim piece from ZONE I.
- Picture 3: Apply low level heat (100° Celcius) to help the adhesive re-adhere.

## Step 32



Power up and test the device.