CELLPHONESANDBOX


Manual 03 - Vibrator

Written By: James Linder



Step 1 — Removal 1 - Front Panel



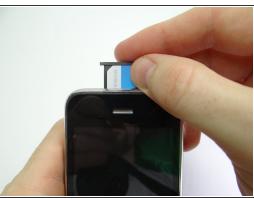




- Remove the SIM Card Tray and SIM Card. Place in COMPARTMENT A
- Remove two Phillips #00 screws and place in SLOT 1.







- Picture 1: Place the suction cup on the screen just above the home button.
- Picture 2: Pull the Front Panel up just enough to wedge the Blue Pry Tool in between the front panel and rear case.
- Picture 3: Pry up just enough to grab the screen with your fingers. Remove the suction cup.

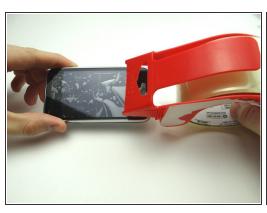





- Picture 1: If you're replacing a cracked display, put a strip of packing tape across the screen.
- Picture 2: Seal the tape over the home button to ensure it comes up with the screen.
- Picture 3: Pry up just enough to grab the screen with your fingers. Remove the suction cup.
- (i) If the screen still won't open, there's still another option for opening it in the next step.








- If you're still unable to open the iPhone, use an iSesamo tool as a last resort:
- Picture 1: Wedge the iSesamo along the bottom edge of the iPhone near the corner.
- Picture 2: Pry up just enough to insert the blue pry tool.
- Picture 3: Use the blue pry tool to continue prying up the screen.





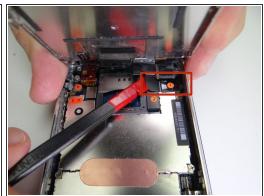


- Pictures 1 & 2: Carefully continue pulling up the front panel until it reaches a 45° angle.
- Picture 3: While holding the front panel at a 45° angle, wedge spudger under cable '1' and rotate counter-clockwise until cable head is free.

Step 6






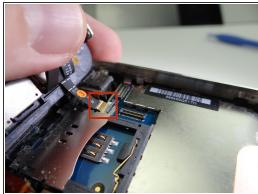

- Picture 1: Use blue pry tool to lift cable 2 from its socket. You can now open the phone to a 90* angle.
- Pictures 2 & 3: Use the blue pry tool to flip the ZIF connector into the upright 'open' position to release the ribbon cable marked '3'.
- Use your thumb to gently guide the ribbon cable out of the ZIF connector.

A Cable '3' should come out with very little pressure. Double-check the ZIF connector latch if you feel tension.

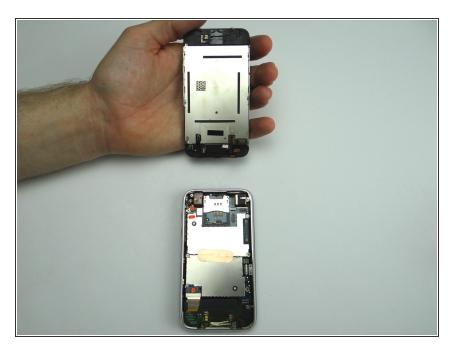

- Separate the front panel from the rear case.
- Place front and rear panels in ZONES I & II.

Step 8 — Disconnect cable '4':









- Picture 1: Use the blue pry tool to pull up foam piece covering cable 4 connector.
- Picture 2: Pry up cable 4 connector with the blue pry tool.
- Picture 3: Squeeze foam back onto cable connector.



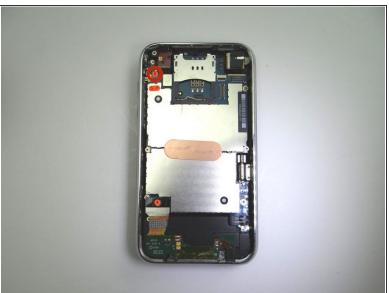



Use blue pry tool to disconnect cables 5 & 6.

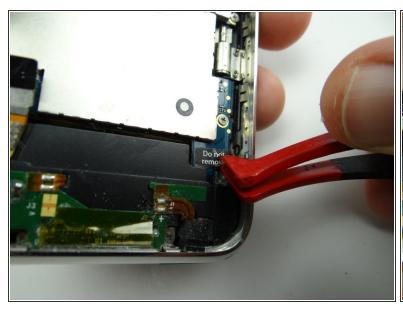




- Use plastic tweezers to peel up 'Do not remove' sticker.
- Remove 3 mm Phillips screw hidden by the sticker. Place in SLOT 4.

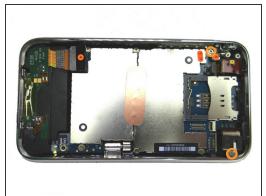


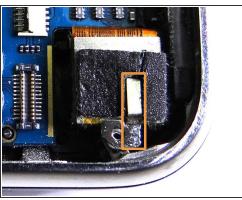

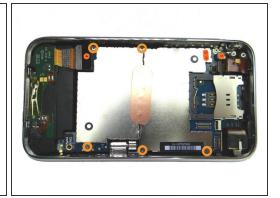

- Picture 1: Remove two 2.3 mm Phillips screws. Place in SLOT 5.
- Picture 2: The camera screw holds down a metal bracket. Remove the bracket and place in SLOT
 5.
- Picture 3: Remove five 2.3 mm Phillips screws. Place in SLOT 6.

Step 12

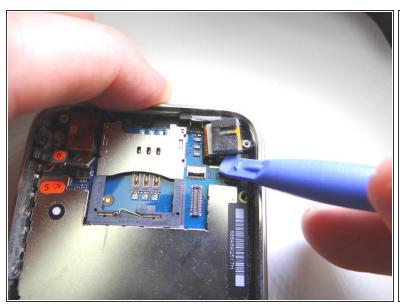




• Pictures 1 & 2: Use blue pry tool to lift the camera slightly out of its socket, as shown in Picture 2.

↑ DO NOT TRY TO REMOVE THE CAMERA. It's still attached to the underside of the logic board.





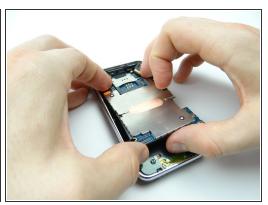

- Picture 1: Use blue pry tool to lift the logic board up from the rear case just enough to grab it with your fingers.
- Picture 2: Make sure you clear the ledge (red square) as you gently guide the logic board towards the bottom of the phone to remove it.
- Place logic board in ZONE III.

Step 14 — Removal 3.1.1 - Vibrator





- Remove two 1.9 mm Phillips screws holding down vibrator (located just above the battery connector). Place screws in COMPARTMENT B.
- Remove the vibrator with your fingers. Place it with screws in COMPARTMENT B.

This document was generated on 2022-01-14 10:24:12 AM (MST).

Step 15 — Replacement 3.1.1 - Vibrator





- From COMPARTMENT B, seat vibrator with your fingers.
- Also from COMPARTMENT B, replace two 1.9 mm Phillips screws to secure vibrator.


Step 16 — Replacement 2.3 - Logic Board









- Pictures 1 & 2: From ZONE III, seat top of logic board first. Make sure the logic board is situated below the ledge shown in the red square.
- Picture 3: Hold the charging port cable out of the way while seating the bottom of the logic board.

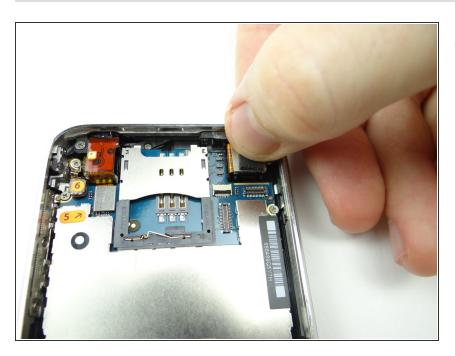

Seat the camera.

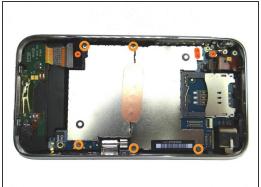

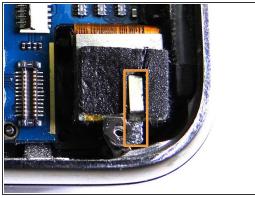



- Picture 1: From SLOT 6, replace five 2.3 mm screws.
- Picture 2: From SLOT 5, seat metal camera bracket.
- Picture 3: From SLOT 5, replace two 2.3 mm screws.







- Picture 1: From SLOT 4, replace the 3 mm 'Do not remove' screw.
- Picture 2: Use your finger to seat cable #6.
- Picture 3: Use your finger to seat cable #5.


Step 20




• Use your finger to seat cable #4.

Step 21 — Replacement 1 - Front Panel




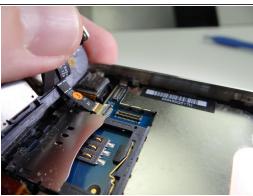


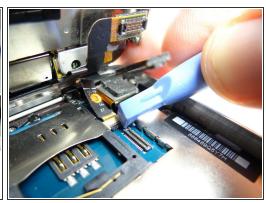

- Picture 1: Reattach front panel to rear case:
- Picture 2: Guide cable '3' into the ZIF connector.
- Picture 3: Use the blue pry tool to sweep down black swing bar to close ZIF connector.

Step 22

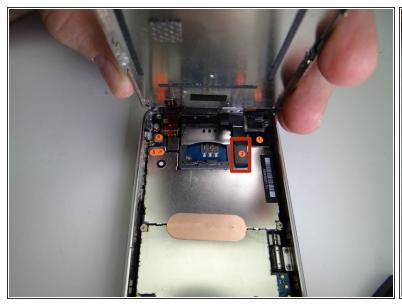

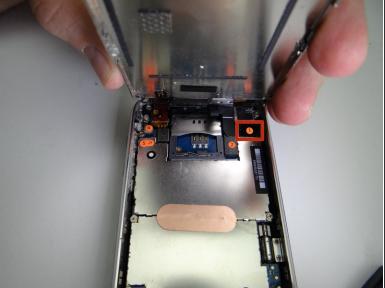

Use your finger to reconnect cable '2' then cable '1'.







- Picture 1: Fold the front panel into the rear case.
- Picture 2: From SLOT 1, replace two Phillips #00 screws.
- Picture 3: Replace SIM card and tray from COMPARTMENT A.

Step 24



Power up and test the device.