CELLPHONESANDBOX

Manual 01 - Home Button Contact Pad

Written By: James Linder



Step 1 — Removal 1 - Metal Plate







- (i) We provide two methods for removing the screen: one using a suction cup and another using the iSesamo opening tool. The suction cup method is preferred, but the iSesamo may be necessary if the screen is badly cracked.
- Picture 1: Place the suction cup on the screen just above the home button. Apply low-level heat (100° Celsius) around the perimeter of the iPod for 60 seconds. Heat the bottom edge for an additional 60 seconds.
- ↑ The iPod may be hot to the touch.
- Pictures 2 & 3: Use the suction cup to pull the screen up just enough to wedge the blue pry tool between the screen and the rubber bezel encircling it.
- Leave suction cup attached.







- Picture 1: Wedge a guitar pick in the lower-right corner. Using the blue pry tool, work your way
 across the bottom edge of the iPod gently prying up as you go.
- Picture 2: Wedge a guitar pick in the lower-left corner. Work your way up the left side with the guitar pick.
- Picture 3: Gently pull up on the suction cup while using the blue pry tool to lift the lower-left corner.
 Repeat on the lower-right corner. Create just enough space to grab the screen with your fingers.
- if you're unable to create suction, use the alternate method in the next two steps. Otherwise, skip the next two steps.

Step 3 — Alternate method if the screen is cracked:








- Picture 1: Apply low-level heat (100° Celsius) around the perimeter of the iPod for 60 seconds.
 Heat the bottom third of the iPod for an additional 60 seconds.
- Picture 2: Insert iSesamo along the right edge, 1 inch from the bottom, at a 90 degree angle.
- Make sure you push between the screen and the black rubber bezel (NOT between the bezel and rear case).
- Picture 3: Pivot iSesamo to begin freeing the screen from the rear case. Work your way up the right edge with just the tip of the iSesamo as shown.









- Picture 1: Continue working along the bottom edge with just the tip of the iSesamo as shown.
- Picture 2: Pivot the iSesamo around the bottom left corner then work your way up the left edge.
- Picture 3: Avoid the digitizer and LCD ribbon cables as marked in the picture.

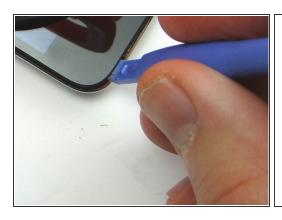




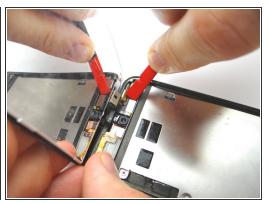

- Picture 1: Wedge the blue pry tool between the screen and the rubber bezel encircling it.
- Picture 2: Gently pry the bottom of the screen free from the rear case with your fingers.
- Picture 3: Open the display assembly to a 90 degree angle. Disconnect the LCD ribbon cable with the spudger.

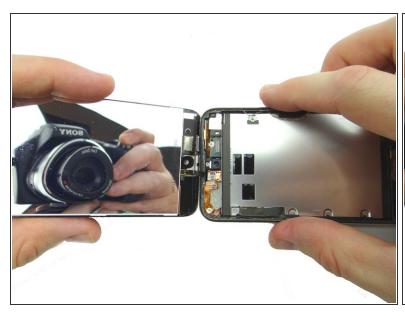

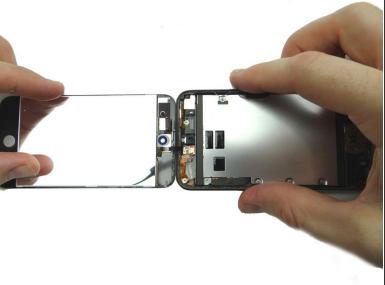

- Lay the display assembly flat on the worktable.
- (i) Don't separate the two halves as the digitizer cable is still attached to the logic board.









- Picture 1: Remove one 2.4 mm Phillips screw and place into SLOT 1
- Picture 2: Remove three 2.0 mm Phillips screws and place into SLOT 2.
- Picture 3: Remove one 3.5 mm Phillips screw and place into SLOT 3.



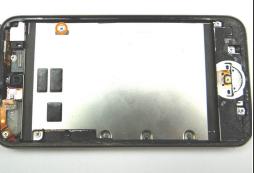



- Picture 1: Remove two 3.0 mm Phillips screws and place into SLOT 4.
- Picture 2: Remove one 2.3 mm Phillips screw and place into SLOT 5.
- Picture 3: Remove the rear camera bracket and place into SLOT 6. Avoid the tiny spring circled in red.

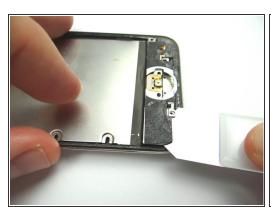






- Picture 1 & 2: Use the iSesamo to pry up the metal plate from bottom edge of the rear case.
- (i) Note: The metal plate continues to the top of the iPod
- Picture 3: Use the Blue Pry Tool along the left edge to continue prying up the metal plate.
- Place metal plate into ZONE I.

Step 10 — Removal 2.1 - Home Button Contact Pad





- Picture 1: Retrieve the metal plate from ZONE I. Note this is the topside of the metal plate.
- Picture 2: From the underside of the metal plate, use the iSesamo to peel up the home button contact pad.

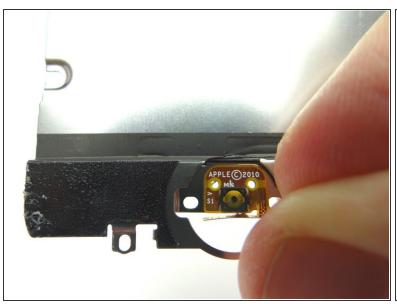





Peel it off the front with your fingers.

Step 12 — Replacement 2.1 - Home Button Contact Pad



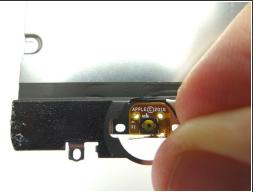

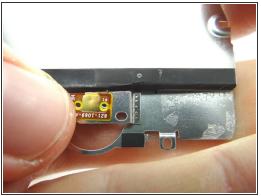

- Place the new home button contact on the metal plate.
- Picture 2: Press the contact on the topside of the metal plate.
- Press the backside of the contact pad into place on the underside of the metal plate.



- Double-check the placement of the contact on the topside to ensure it matches the picture.
- Place the metal plate in ZONE I.


Step 14 — Replacement 1 - Metal Plate








- Picture 1: Replace metal plate from ZONE I.
- Picture 1: Replace one 2.3 mm Phillips screw from SLOT 5.
- Picture 2: Replace two 3.0 mm Phillips screws from SLOT 4.
- Picture 3: Replace one 3.5 mm Phillips screw from SLOT 3.

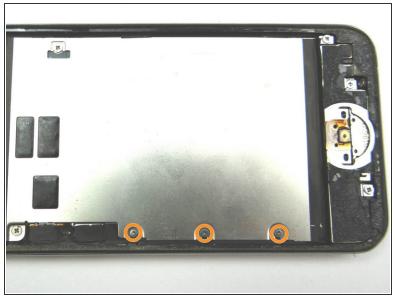

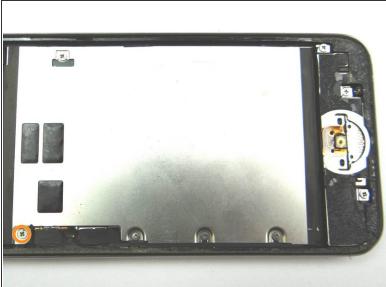

- Picture 1: Replace three 2.0 mm Phillips screws from SLOT 2.
- Picture 2: Replace one 2.4 mm Phillips screw from SLOT 1.


Step 16






- Remove adhesive and glass shards (if any) from rear case.
- Clean adhesive from the screen.

This document was generated on 2021-12-21 10:13:25 PM (MST).

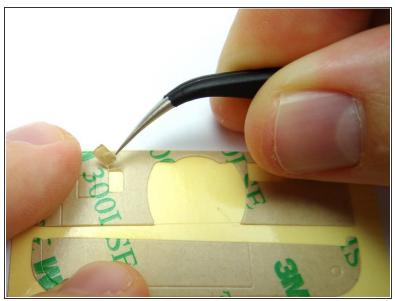



- Picture 1: Prepare new adhesive by removing the cutout portions with Curved Tip Tweezers.
- Picture 2: Fully prepared adhesive strips.

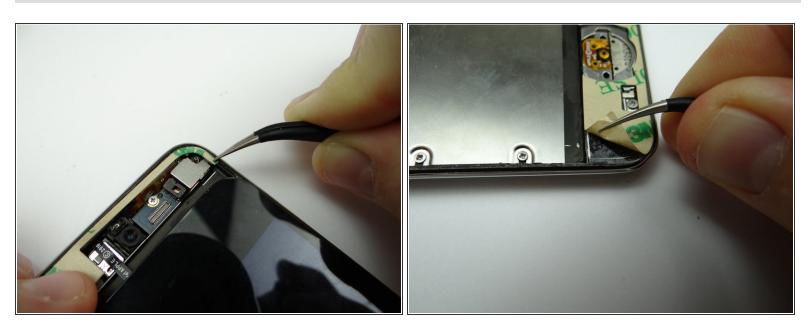

- Picture 1: Place thin adhesive strip at the top of the rear case. Use your fingers to place the upperleft corner and curved-tip tweezers to place the upper-right corner. Peel off the paper backing.
- Picture 2: Repeat with adhesive strip at the bottom, but don't close the iPod
- Tuck in any part of the adhesive hanging over the edge of the rear case, if necessary.







- Picture 1: Make sure the digitizer cable folds into a 'Z' shape when closing the iPod.
- Picture 2: Connect the LCD cable.
- Picture 3: Power up and test the LCD and digitizer while holding the front panel away from the adhesive on the rear case.
- (i) After reassembling an iPod, it is common to see lines down the LCD or a white screen. Try turning it off and back on. If that doesn't work, you may have to perform a soft reset. (Press and hold power and home buttons simultaneously for ten seconds). If issues with the LCD persist, try reseating the LCD cable.







- Picture 1: Make sure the clips on the underside of the display, near the top, seat underneath the lip on the rear case.
- Picture 2: Slide the top edge of the display assembly into the rear case.
- If any of the adhesive is sticking out between the bezel and the digitizer, use the iSesamo to tuck it underneath the display assembly.
- Press top firmly into place. Press bottom of the screen firmly into place.
- Picture 3: Using light pressure, run your fingers up and down the left and right edges of the iPod to ensure the new display sits flush against the rear case.



- Turn the iPod over and press the screen firmly into place, putting moderate pressure at the top and bottom as pictured. Hold for two minutes.
- Power up and test the device.
- Let the adhesive cure for at least 30 minutes before returning the device to the customer.