



CELLPHONESANDBOX

Manual 05 - Volume Rocker

Written By: James Linder

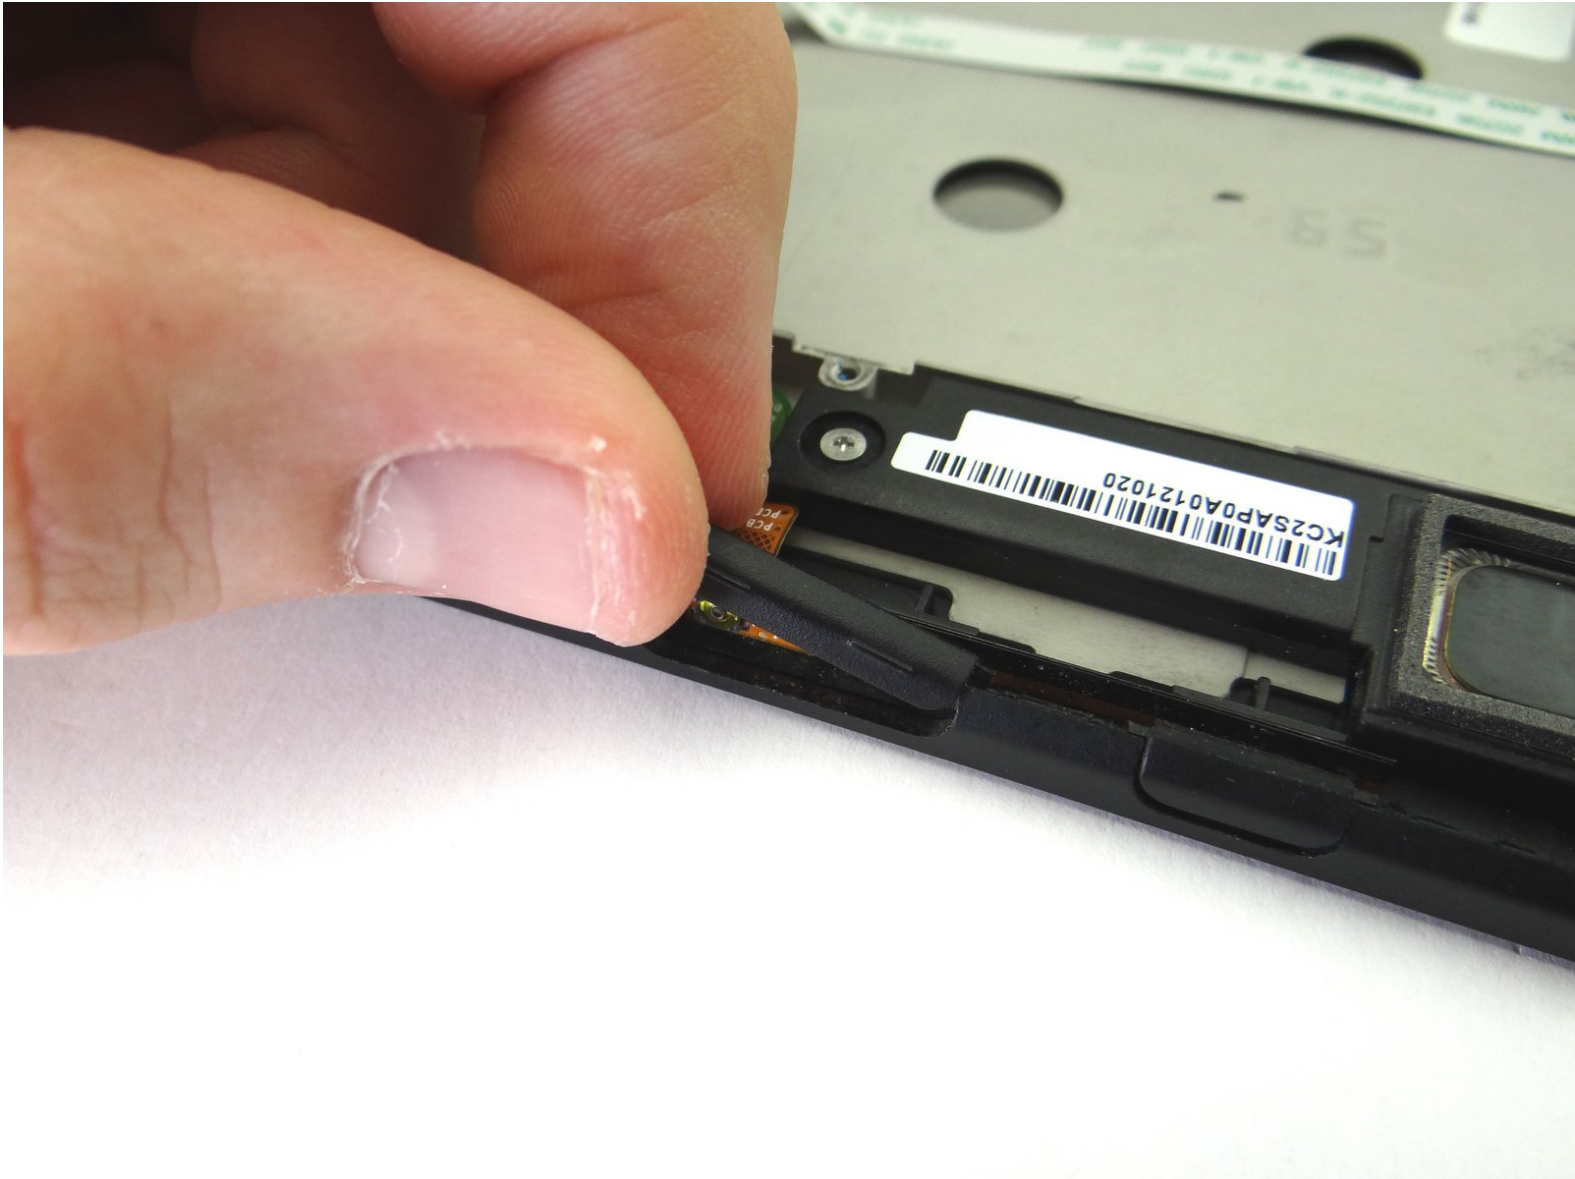

Step 1 — Removal 1 - Battery Cover

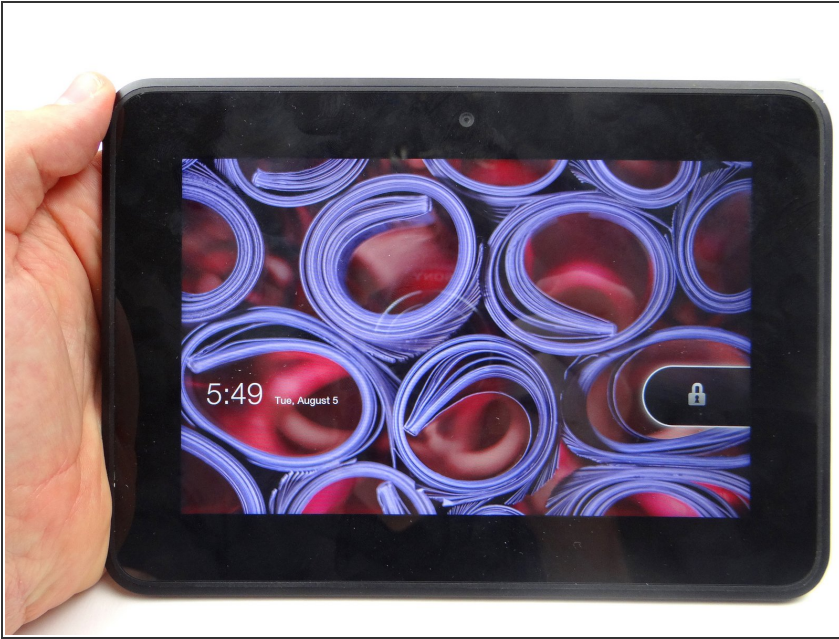

- Power down device.

Step 2




- Picture 1: Insert the blue pry tool between the front panel and battery cover, with the the tip face down, an inch left of the charging port. Pop up the cover just enough to reinsert the blue pry tool face up.
- Pictures 2 & 3: Insert the blue pry tool face up an inch left of the charging port. Twist until you can grab the battery cover with your fingers.

Step 3




- Work your way around the perimeter with your fingers. Continue peeling the battery cover up until it's free.
- Place battery cover in ZONE V.

Step 4 — Removal 4.2 - Volume Rocker

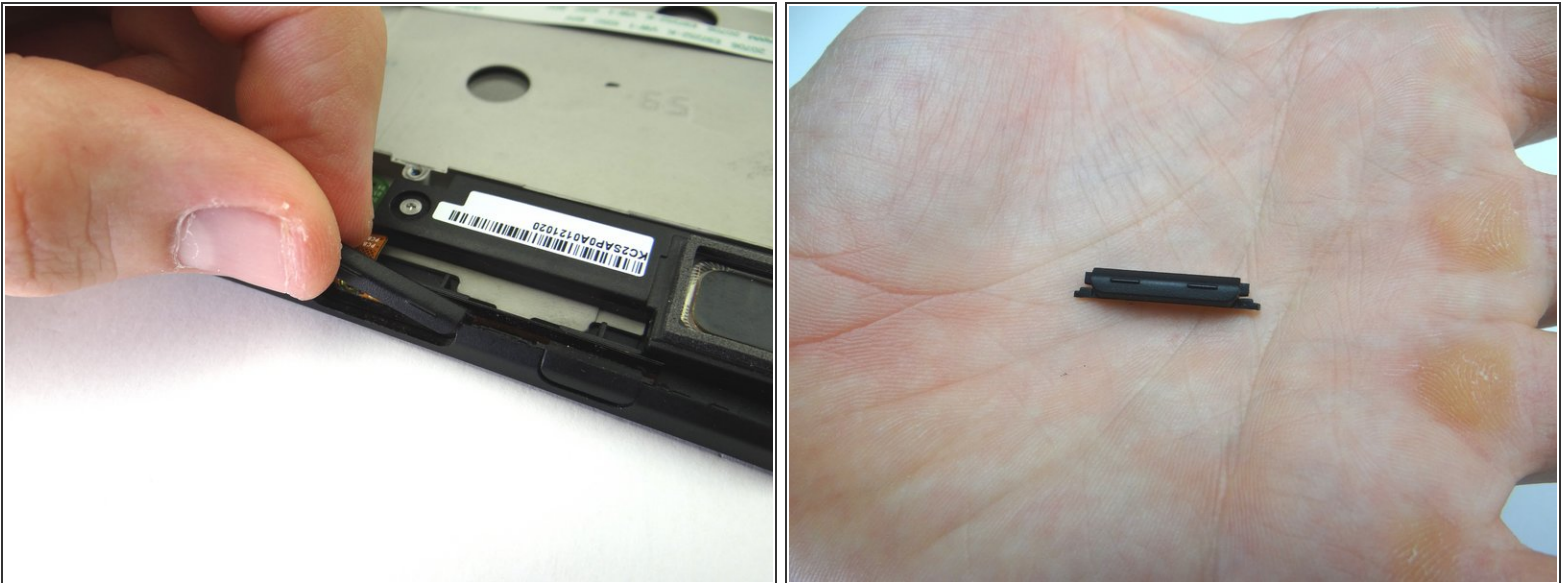

- Gently lift volume rocker. Place in COMPARTMENT A.

Step 5 — Replacement 4.2 - Volume Rocker

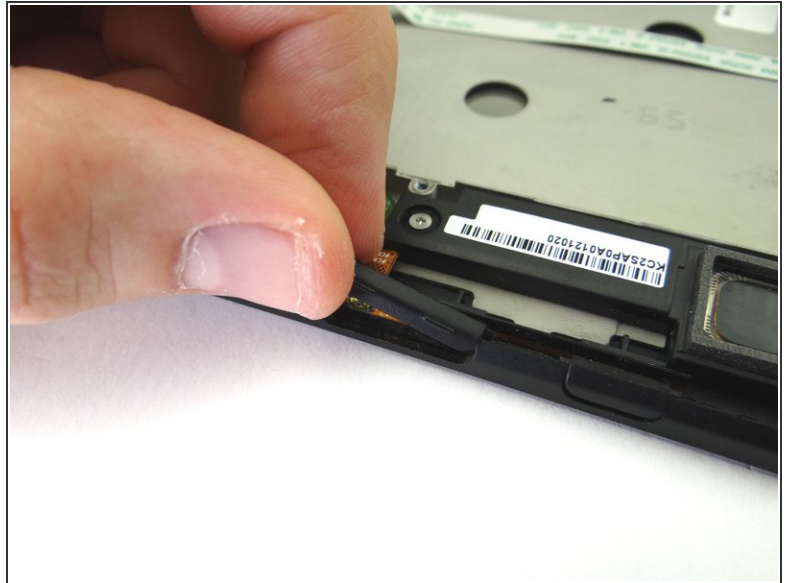

- Maintain orientation from Picture 1:
- From COMPARTMENT A, replace volume rocker.

Step 6 — Replacement 1 - Battery Cover



- Push battery cover back onto Kindle.

Step 7



- Pictures 1 & 2: Check around the edges for gaps between the battery cover and front panel.
- Picture 3: Power up and test device.