

# CELLPHONESANDBOX

## Manual 02 - Loudspeaker

Written By: James Linder



## Step 1 — Removal 1 - Battery Cover




- In the next few steps, you'll be opening the Kindle by freeing the clips marked in Picture 2.

## Step 2



- Picture 1: Insert the blue pry tool directly under the charging port.
- Picture 2: Slide the blue pry tool slightly left, under the headset jack.
- Picture 3: Pry the battery cover open just enough to insert a guitar pick left of the headset jack.

### Step 3

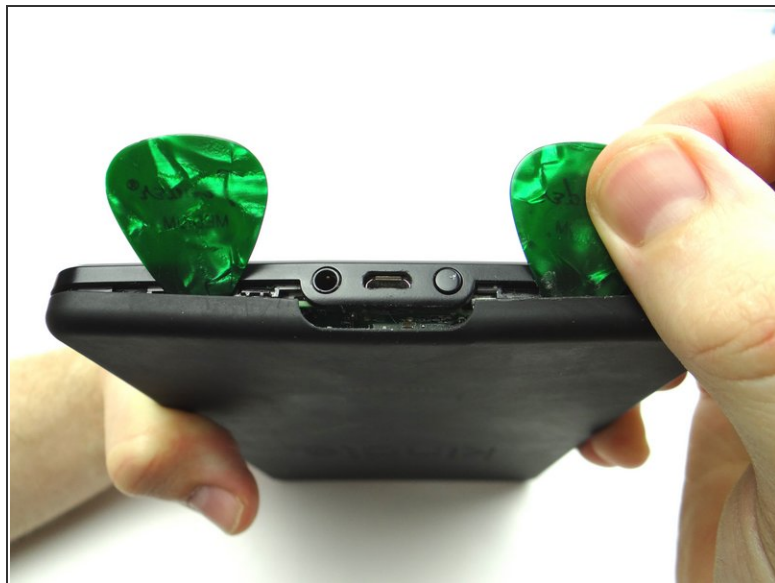

- Picture 1: Slide the blue pry tool right, under the power button.
- Picture 2: Pry the battery cover open just enough to insert a guitar pick right of the power button.

### Step 4



- Pry from the bottom of the Kindle to the top to release the battery cover clips.
- Pry up the other side.




## Step 5



- With the Kindle upside down (charging port at top), use your hands to separate the battery cover from the Kindle. Start at the charging port and work your way down.
- Place battery cover in ZONE V.

## Step 6 — Removal 2 - Loudspeaker

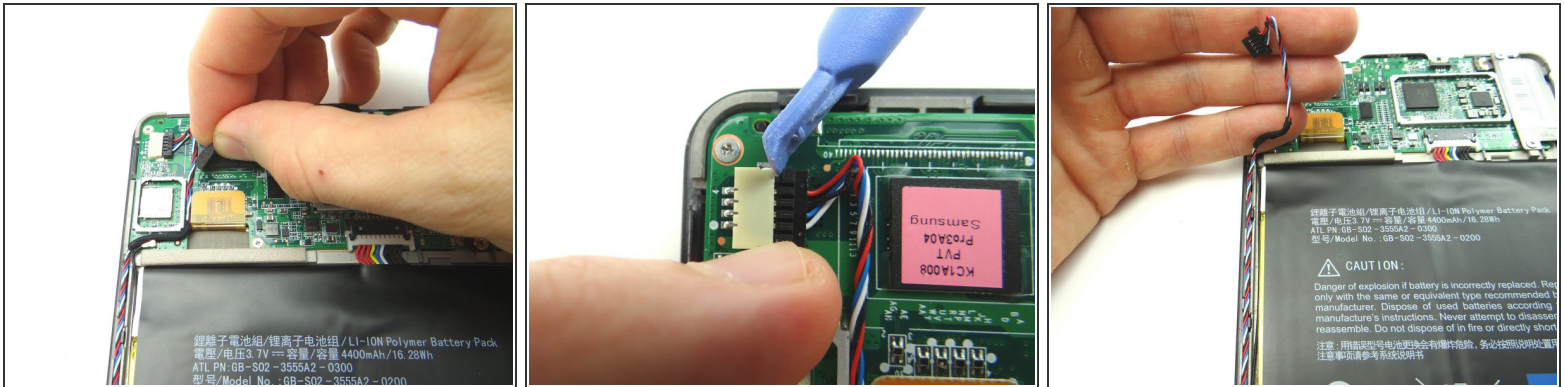

- Picture 1: Peel up foam tape covering the speaker connector. Place in COMPARTMENT A.
- Picture 2: Wedge your fingers in the notches between the black speaker cable head and the white speaker connector. Pull the black speaker cable head free.
- ① Use a blue pry tool if you can't fit your fingers in the notches.
- Picture 3: Unthread the speaker cable.

## Step 7




- Remove two 3.3 mm Phillips #00 screws securing the speaker assembly. Place in SLOT 1.
- Remove speaker assembly and place in ZONE I.

## Step 8 — Replacement 2 - Loudspeaker



- Replace speaker assembly from ZONE I.
- Replace two 3.3 mm Phillips #00 screws securing the speaker assembly from SLOT 1.

## Step 9

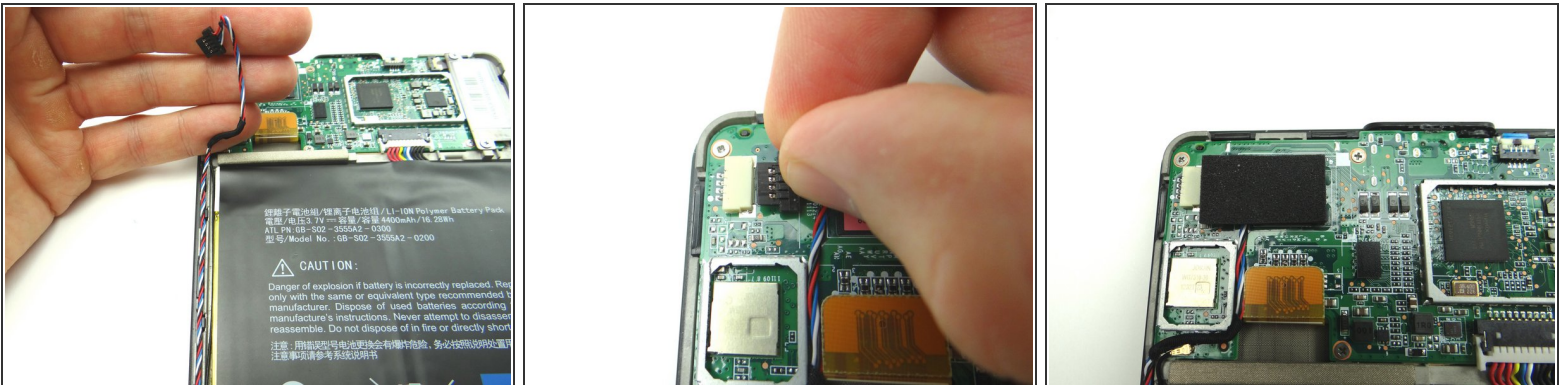

- Picture 1: Thread speaker cable through the track just left of the battery.
- Picture 2: Push speaker cable connector into place.
- Replace foam tape from COMPARTMENT A.



## Step 10 — Replacement 1 - Battery Cover



- From ZONE V, secure the battery cover to the Kindle.
- Start with the two tabs on either side of the charging port.

## Step 11



- Push the bottom into place and work your way to the top.

## Step 12



- Power up the device and test the replacement part or parts.